


Installation guide

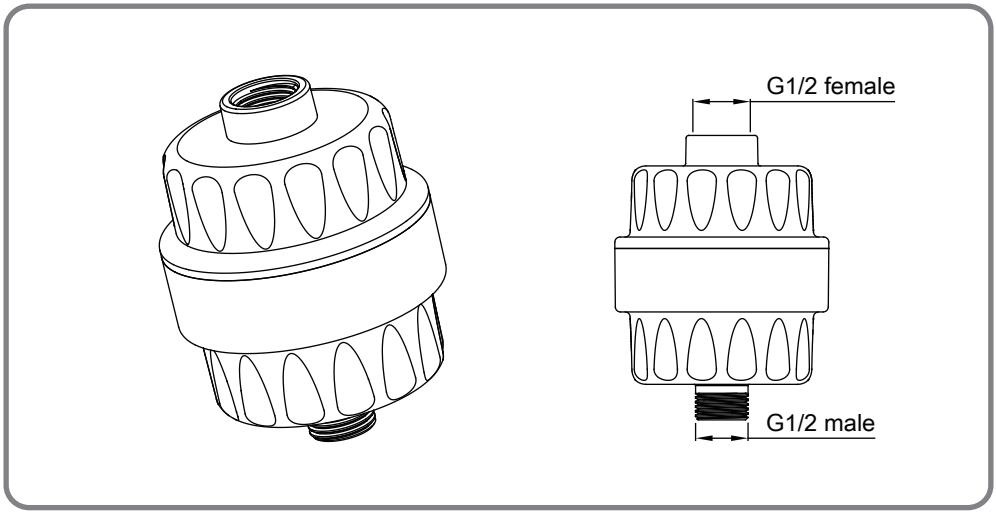

INSTALLATION

1. Rinse the filter first with water for 20s (it is normal for the water to be slightly black at the beginning).
2. Unscrew the fixed shower head from the shower arm counterclockwise.
3. Wrap the white Teflon tape clockwise around the threads of the shower arm.
4. Screw the G1/2 female thread to the shower arm.
5. Attach the fixed showerhead to the filter.

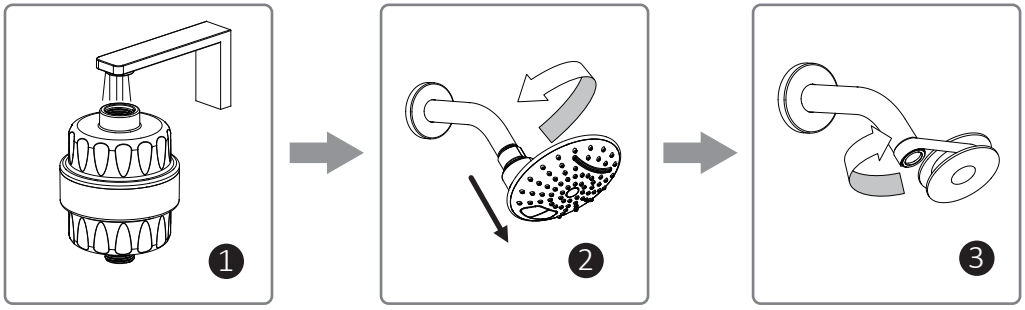

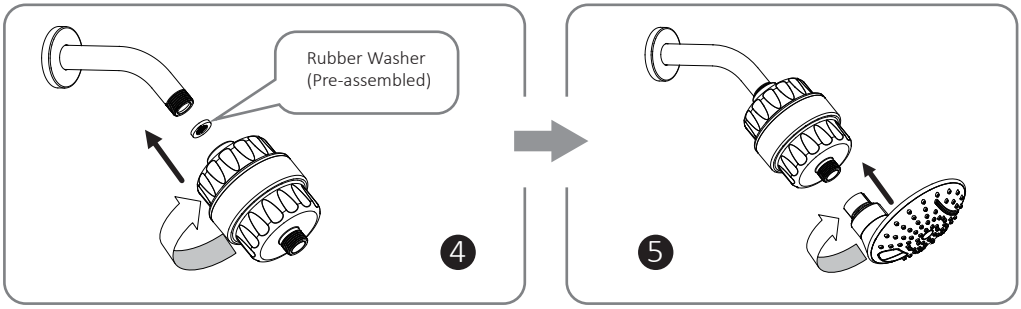


TROUBLE SHOOTING

After prolonged use, scale may accumulate on the filter screen, causing a reduction in water flow.
Solution: Clean any residual scale or debris from the filter screen and filter gasket.

Recommendation: please replace the filter after using half a year.

HOW TO REPLACE THE USED CARTRIDGE

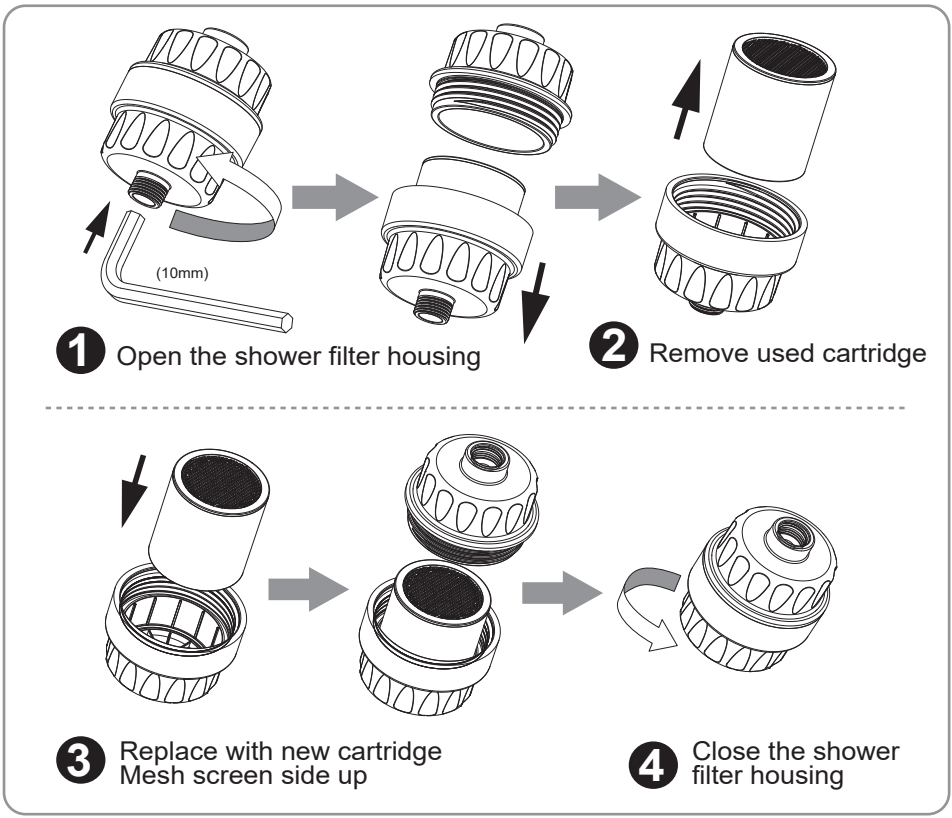

bright showers

If you have any questions or concerns about this product, please don't hesitate to contact us. Thank you for choosing us as your Premier Bath Fixtures.
Email: customersupport@brightshowers.com