Installation guide

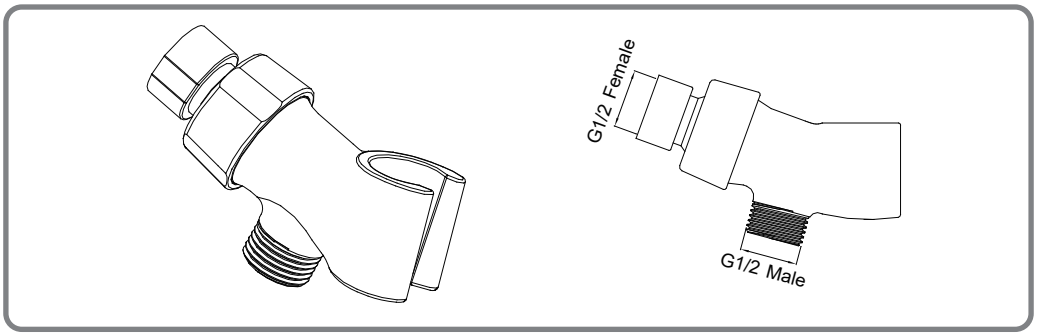

INSTALLATION

Tool Required:



White
Teflon Tape



Adjustable
Wrench

Before You Begin

- **Observe all local plumbing and building codes.**
- **Shut off the main water supply.**

1. Remove the old shower head from the shower arm.
2. Clean the threads on the shower arm.
3. Wrap the white teflon tape tightly around the shower pipe evenly for 8 to 10 wraps clockwise. (please refer fig.1)
4. Screw the handheld bracket onto the end of the shower pipe threads in a clockwise direction. Connect the shower hose to the handheld bracket and hand shower, then put the hand shower into shower arm mount. (please refer fig.2)
5. Turn on the water and check for leaks. If leaks occur, shut off the water and check the rubber washers at the connection parts and tighten further.

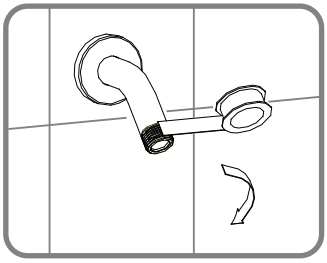

fig.1

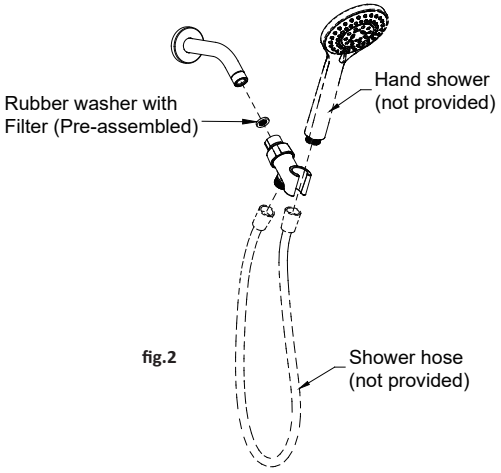

fig.2

bright showers

If you have any questions or concerns about this product, please don't hesitate to contact us. Thank you for choosing us as your Premier Bath Fixtures.
Email: customersupport@brightshowers.com