

Installation guide *Water flow control valve*

Thank you for choosing and using our products.
Please read the entire contents of this installation manual carefully before installation.

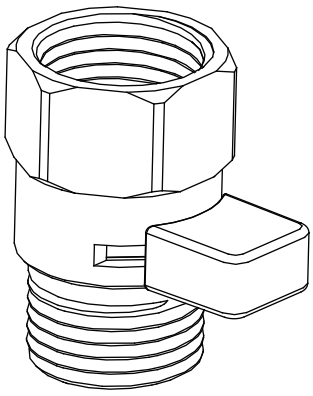

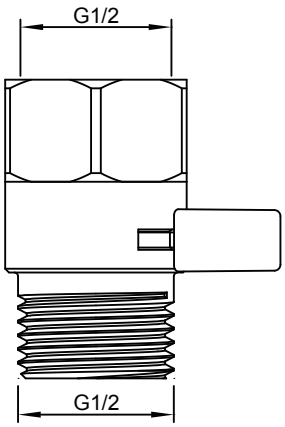

Tools and Materials:



Thread Sealant Tape



Adjustable Wrench


Before You Begin

- Observe all local plumbing and building codes.
- Shut off the main water supply.


This flow control valve can be used with a fixed showerhead or a handheld showerhead or a bidet sprayer.

A:For fixed shower head

1. Wrap the teflon tape around the shower arm evenly for 8 to 10 wraps clockwise.

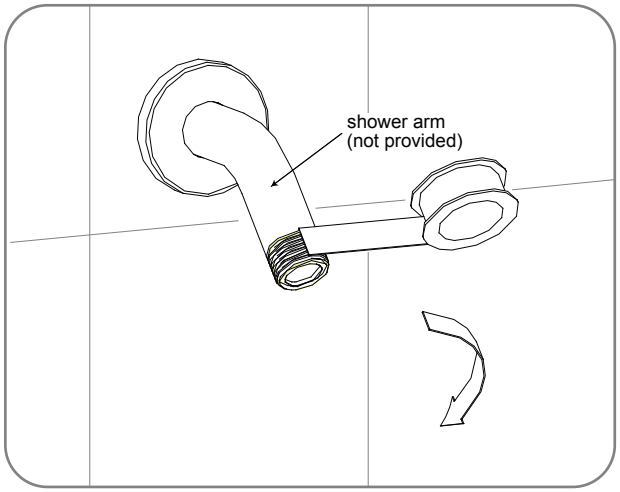


2. Connect the female thread of this water flow control valve to the arm and tighten with adjustable wrench.
Hand tighten the showerhead to water flow control valve.
Please make sure rubber washer is in position.

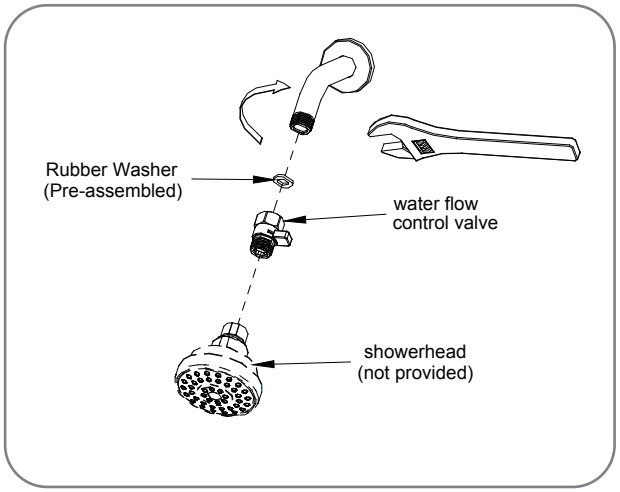

B:For handheld shower head or bidet sprayer

Connect the water flow control valve with shower hose and handheld shower head or bidet sprayer just make sure the rubber washers are in position.

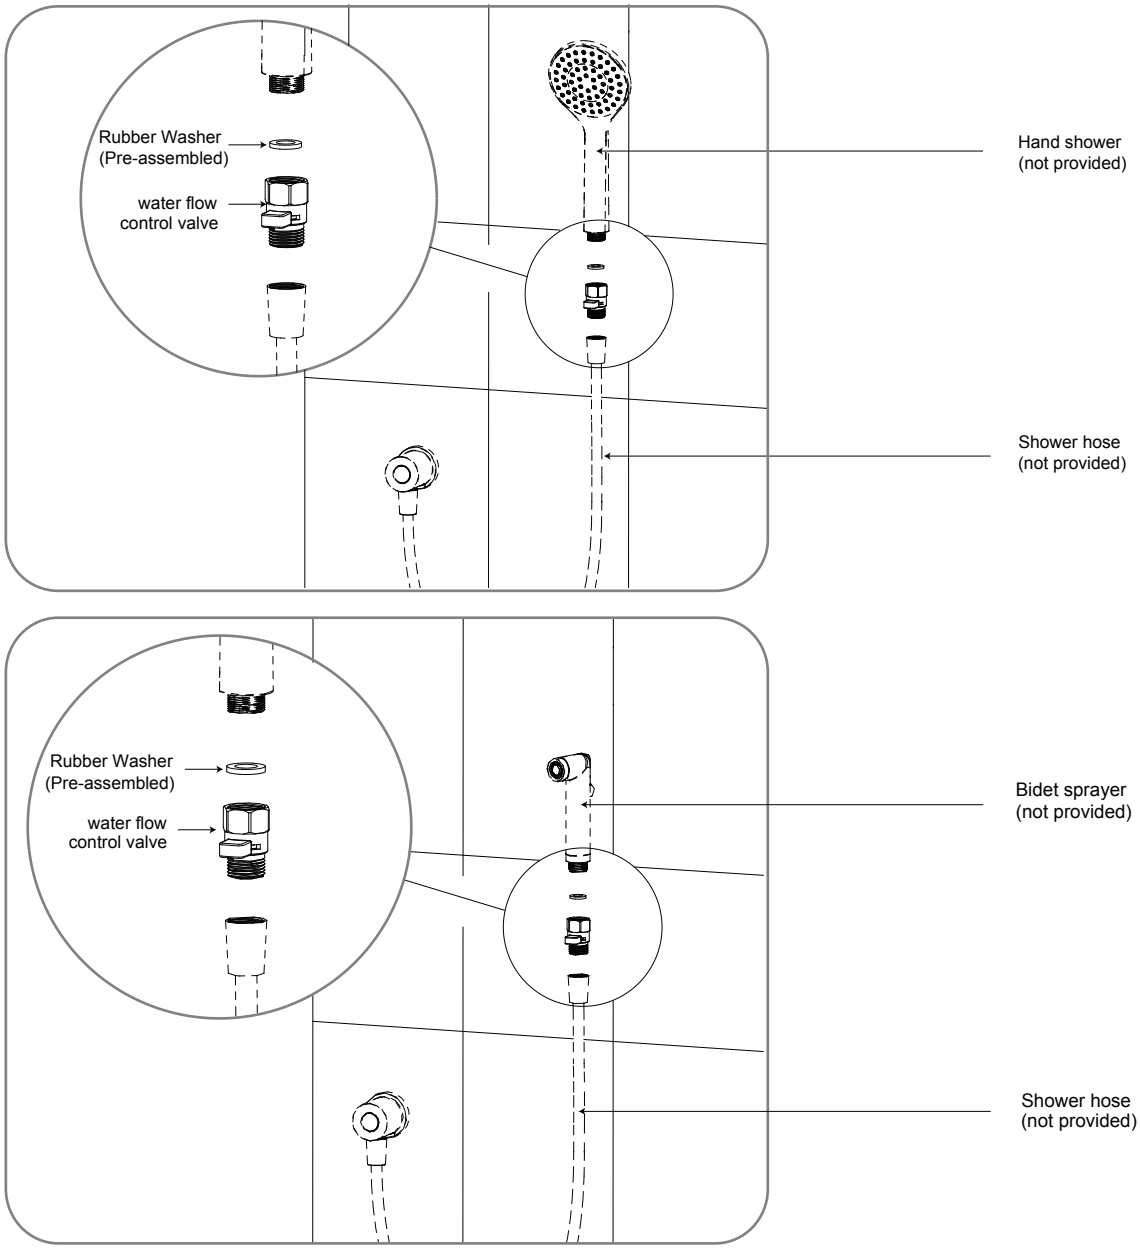

bright showers

If you have any questions or concerns about this product, please don't hesitate to contact us. Thank you for choosing us as your Premier Bath Fixtures.
Email: customersupport@brightshowers.com