尺寸:210*297MM/A4纸/正反面黑白印刷/虚线对折

bright showers

If you have any questions or concerns about this product, please don't hesitate to contact us. Thank you for choosing us as your Premier Bath Fixtures.
Email: customersupport@brightshowers.com

Installation Guide

Thank you for choosing and using our products.
After opening the package, please check the parts according to the following table.

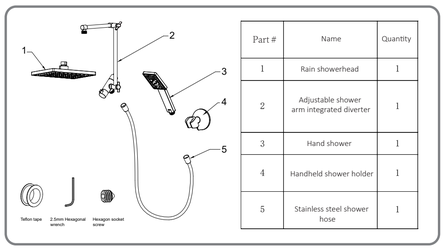

Part #	Name	Quantity
1	Rain showerhead	1
2	Adjustable shower arm integrated diverter	1
3	Hand shower	1
4	Handheld shower holder	1
5	Stainless steel shower hose	1

INSTALLATION

1. Remove the old showerhead from the shower arm.
2. Clean the threads on the shower arm. There may be residual thread sealing tape or mineral deposits, which can be removed using mild soap, water, and/or an old toothbrush.
3. Wrap white Teflon tape tightly around the shower pipe threads, making 4 to 5 even wraps in a clockwise direction.(Refer Fig.1)
4. Connect the female thread of the adjustable shower arm to the existing shower arm. Tighten the nut with an adjustable wrench, then tighten the hexagon socket set screws. Adjust the shower arm to your desired angle.
(Ensure the preassembled rubber washer is in place.)

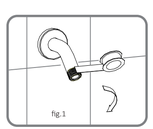
fig.1

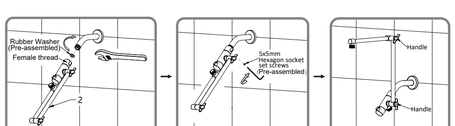

5. Install the handheld shower head holder. Two installation options are available based on your bathroom conditions:
A: For flat and smooth surfaces, drill-free installation is recommended.
Clean and dry the application surface, peel off the protective film from the backside of the wall bracket and stick it firmly to the tile.
B: For walls where 3M double-sided tape does not adhere properly, please use screws instead. Follow these steps:

Detach the wall bracket from the shower holder using a Phillips screwdriver.

Choose a suitable position on the wall and mark two spots. Drill two holes 35mm (1 3/8") deep using a 6mm (1/4") diameter drill bit. Insert wall anchors and fix the wall bracket securely with the provided screws.

Reattach the shower holder to the wall bracket and tighten it with the screwdriver.

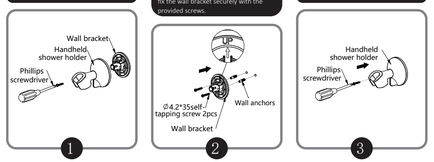

6. Screw the rain showerhead onto the adjustable shower arm. Connect the shower hose to both the adjustable shower arm and the handheld showerhead. (Ensure that rubber washers are used at all connection points.)

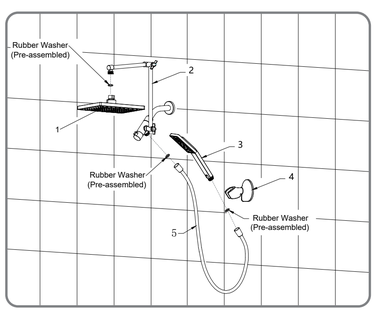

7. Turn on the water and check for leaks. If leaks occur, turn off the water and check the connections to ensure that the washers are properly placed and tighten the connections further.

CLEANING & MAINTENANCE

- To maintain proper working performance, clean your shower head when mineral deposits appear on the spray nozzles. To remove mineral deposits, gently rub the rubber nozzles on the face of the shower head.
- For heavier deposits, remove the shower head and soak it face-down in 1-2 cups of white vinegar (use white vinegar only)for about 2-3 hours.
- Do not clean or rinse any part with harsh chemicals, heavy-duty cleaners, or abrasives; as they may damage the parts or finish.

TROUBLESHOOTING GUIDE

Problem	Solution
No water flow from installed shower head	**a. Ensure the previous shower washer is not inside the shower pipe.** **b. Confirm there is only one washer in the pivot ball.**
Low water pressure or missing spray patterns	**a. Clean shower head in vinegar/water solution. (See cleaning & maintenance section).** **b. Clean the filter screen of the washer inside the pivot ball.** **c. Replace or remove the flow restrictor inside the shower head.**
Leaking at the pipe-to-diverter or adjustable shower arm-to-rain shower head connections. 	**a. Ensure only one washer is seated in the connection, lying flat without bends or damage.**  **b. Do not over-tighten the connection, as excessive force can deform the washer and cause leaks.** **c. If the washer is damaged, replace it with spare washer or wrap more Teflon tape on the shower pipe threads.**
Leaking at the hose-to-diverter or hose to hand shower head connections. 	**a. Ensure only one washer is seated in the connection, lying flat without bends or damage** **b. Confirm whether the washer is damaged, and if so, replace it with the spare washer.** **c. Contact Bright Showers for a hose replacement.**
Leaking at the connection between the extension arm and the joint 	**a. Tighten the handle properly.** **b. Contact Bright Showers for further assistance.**
The extension arm tends to shake left and right in the position 	**a. Tighten the threaded connector clockwise with a wrench. Then tighten the hexagon socket screw on the nut.** **b. Remove the Teflon tape from the threads and reattach the connector. Then, tighten the threads clockwise with a wrench, and tighten the hexagon socket screw on the nut.**
The plastic O-ring inside the rain shower head appears cracked. 	**The plastic O-ring around the ball joint has deliberate cracked design and is not defective.**
The ball joint of rain shower head is too stiff to adjust angle or too loose to hold the showerhead securely	**Loosen or tighten the rain shower head nut using an adjustable wrench.(Contact Bright Showers for further assistance)**