Installation Guide

Thank you for choosing and using our products!
For this handheld shower head holder, two installation options are available, please choose based on your bathroom condition.

A For flat and smooth surfaces, drill-free installation is recommended.
Clean and dry the application surface, peel off the protective film from the backside of the wall bracket and stick it firmly to the tile.

B For walls where 3M double-sided tape does not adhere properly, please use screws instead.
Follow these steps:

Detach the wall bracket from the shower holder using a Phillips screwdriver.

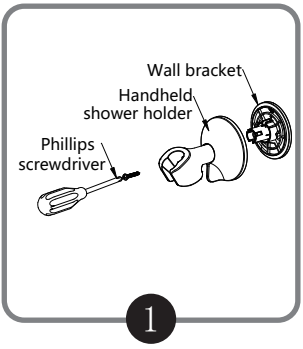

Choose a suitable position on the wall and mark two spots. Drill two holes 35mm (1 3/8") deep using a 6mm (1/4") diameter drill bit. Insert wall anchors and fix the wall bracket securely with the provided screws.

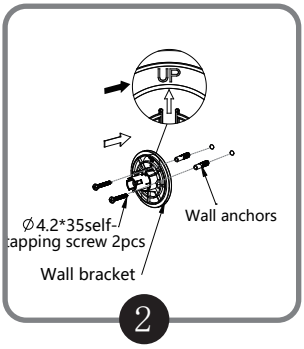

Reattach the shower holder to the wall bracket and tighten it with the screwdriver.

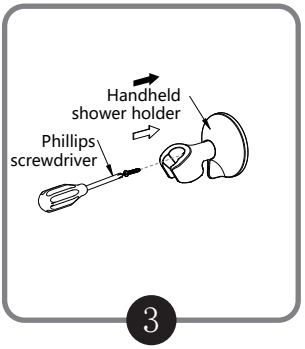

If you have any questions or concerns about this product, please don't hesitate to contact us. Thank you for choosing us as your Premier Bath Fixtures.
Email: customersupport@brightshowers.com