Installation guide

Thank you for choosing and using our products.
Please read the entire contents of this installation manual carefully before installation.

Tools and Materials Required:

- Phillips screwdriver
- Pencil
- Electric Drill
- Hammer
- 6mm(1/4")diameter drill bit

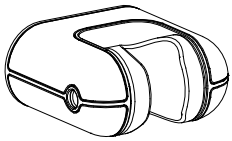

Installation:

1 Select a suitable position on the wall to mark with a pencil, drill two 45mm (1 3/4") deep hole with a 6mm (1/4") diameter drill bit, then Insert the wall anchors into the holes.

⚠ ***Caution: Be careful to avoid pipes in the wall when drilling***

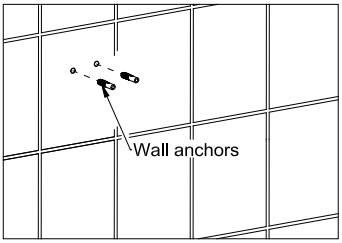

2 Tighten the self-tapping screw to fix the stainless plate .

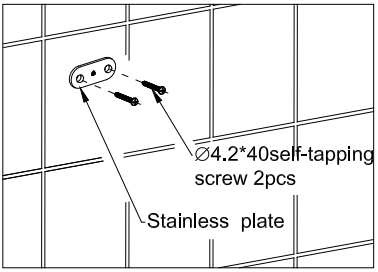

3 Tighten the screw through the middle hole with a Phillips screwdriver to lock the shower head bracket.

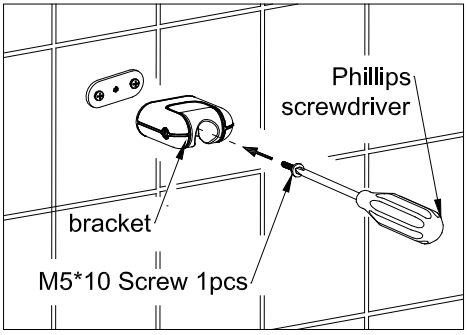

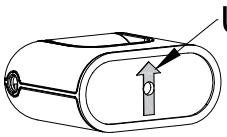

⚠ ***Caution: Make sure the arrow mark on the back of the bracket is facing upward before you lock the bracket.***

4 Adjust the holder so that the bigger gap is facing upward so that the handheld shower can fit. Then tighten the Philip screw at the two sides to finish installation.

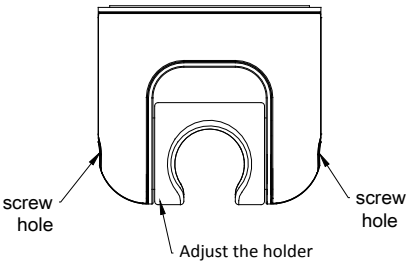

bright showers®

If you have any questions or concerns about this product, please don't hesitate to contact us. Thank you for choosing us as your Premier Bath Fixtures.
Email: customersupport@brightshowers.com